



## Cube IP Bridge Cable Connection to RS485 meters

- Cable Connections:

<b>Cube400 / 350 / 300</b>	<b>IP Bridge</b>
Terminal 19 or 20 ( 'A' )	Pins 14 & 21
Terminal 21 or 22 ( 'B' )	Pins 15 & 22
Terminal 23 or 24 ( '0v' )	Pin 7
<b>Rail350</b>	<b>IP Bridge</b>
Terminal 15 ( 'A' )	Pins 14 & 21
Terminal 16 ( 'B' )	Pins 15 & 22
Terminal 17 ( '0v' )	Pin 7
<b>Rail323</b>	<b>IP Bridge</b>
Terminal 8 and 10 ( 'A' )	Pins 14 & 21
Terminal 7 and 9 ( 'B' )	Pins 15 & 22
Terminal 11 ( '0v' )	Pin 7
<b>RailRTU/MultiRail</b>	<b>IP Bridge</b>
Terminal 15 ( 'A' )	Pins 14 & 21
Terminal 16 ( 'B' )	Pins 15 & 22
Terminal 17 ( '0v' )	Pin 7
<b>MultiCube Internal RS485</b>	<b>IP Bridge</b>
Terminal 28 ( 'A' )	Pins 14 & 21
Terminal 27 ( 'B' )	Pins 15 & 22
Terminal 25 or 26 ( '0v' )	Pins 7
<b>MultiCube External RS485</b>	<b>IP Bridge</b>
Terminal 27 and 29 ( 'A' )	Pins 14 & 21
Terminal 28 and 30 ( 'B' )	Pins 15 & 22
Terminal 26 ( '0v' )	Pins 7
<b>kWhCube Internal RS485</b>	<b>IP Bridge</b>
Terminal 28 ( 'A' )	Pins 14 & 21
Terminal 27 ( 'B' )	Pins 15 & 22
Terminal 25 or 26 ( '0v' )	Pins 7